# The VMARS Archive

VMARS is a not-for-profit organisation specialising in all types of vintage communications electronics. We maintain an archive of documentation to help our members understand, research, repair and enjoy their vintage radio equipment. Access by non-members is extended as a gesture of goodwill, but not as a right.

Rare documents are frequently provided free of charge by VMARS members, and all scanning and document processing is carried out on a voluntary basis. Accordingly, we do not expect others to profit from the hard work of volunteers, who give their time freely without charge.

This is a gentle reminder that the document attached to this notice is provided to you **for your personal use only**. This edition remains copyright of VMARS, and while you may sell or give your copy to someone else, this right does not extend to making further copies of this information, either to give or sell to others. This includes a prohibition on placing it on websites, or printing it for sale at rallies, boot fairs or similar public events. **If our goodwill is abused, then withdrawal of public access to our archive will be the result.** 

Please refer anyone else wanting a copy back to VMARS – either to our website at <a href="http://www.vmars.org.uk/">http://www.vmars.org.uk/</a> or by email to the Archivist at <a href="marchivist@vmarsmanuals.co.uk">archivist@vmarsmanuals.co.uk</a>. If you want to know more about our copyright, please see the FAQ below.

# FAQ on copyright of VMARS documents

- **Q** How can you copyright a document that is already in the public domain?
- A. Plainly the original copyright of the content has expired, or we have obtained permission to copy them. What we copyright is our own edition of the document.
- **Q.** Surely your "own edition" is identical to the original document, so cannot be copyrighted?
- A. Our editions are **not** identical to the original document. You will find that full advantage has been taken of electronic publishing facilities, so pages are cleaned up where possible (rendering them better than originals in some cases!), and large diagrams are prepared for both on-screen viewing and for easy printing at A4 format.
- **Q.** Why do you not just give your manuals away, as so many do via the internet these days?
- A. We do make all our manuals available free of charge (in soft copy) to VMARS members. These members have already covered the costs of running the archive via their subscriptions. The only time members are charged for copies is when they request them on paper, in which case charges are restricted to the cost of paper, ink and postage.

The VMARS archive is not a "shoe-string" operation. Money is spent on computing facilities to make copies available, and on shipping original documents securely (usually costing several pounds per shipment) to carry out the scanning. As members have already contributed to these costs, it is only reasonable that non-members should do likewise — and thus a very moderate charge is levied for copies provided to non-members. With typical commercial photocopying charges starting at 5 pence per A4 side, it will be evident that paying 4 pence for our equivalent on paper is excellent value (amounts current at Spring 2004). We also think "you get what you pay for" — we invite you to make the comparison and draw your own conclusions!

Despite the above, we will be making copies of essential technical information (circuit diagram, parts list, layout) freely available to all via our website from late 2004 onwards. This will be done to try and encourage and enable the maintenance of our remaining stock of vintage electronic equipment.

# Guidance on using this electronic document

#### **Acrobat Reader version**

You need to view this document with Acrobat Reader <u>version 5.0</u> or later. It is possible that the document might open with an earlier version of the Acrobat Reader (thus allowing you to get this far!), but is also likely that some pages will not be shown correctly. You can upgrade your Acrobat Reader by direct download from the internet at <a href="http://www.adobe.com/products/acrobat/readermain.html">http://www.adobe.com/products/acrobat/readermain.html</a> or going to <a href="http://www.adobe.com/">http://www.adobe.com/</a> and navigating from there.

# Don't miss the index!

This document has had "bookmarks" added – which provide you with an "on-screen index". These allow you to quickly move to particular parts of the document, a numbered section or maybe the circuit diagrams for instance, merely by clicking on the page title. Click on the "Bookmarks" tab on the left hand side of the Acrobat Viewer window to access this feature – move the cursor over these titles and notice it change shape as you do so. Click on any of these titles to move to that page.

# Large diagrams

The large diagrams are given in two formats – in A4 size sheets to allow easy printing, and complete as originally published to allow easy on-screen viewing. These versions are in different sections of the document, which can be found within the bookmarks.

# Printing the document on an A4 format printer

The document has been optimised for printing on A4 size paper (this is the common size available in UK and Europe, which measures 29.7cm by 21.0cm). Please follow these steps (these are based on Acrobat Reader version 6.0 – other versions may differ in detail):

- 1. Work out the page numbers you want to print. If you want to print the whole document, then within "Bookmarks" (see above), first click on "Front", and note the page number given at the bottom of the Acrobat window this will give you the page number of the first page to be printed. Similarly click on "End of A4 printable copy", to determine the last page to be printed.
- 2. Select "File Print" or click on the printer icon. This will bring up the print dialog box.
- 3. Select the correct printer if necessary.
- 4. In the area marked "Print Range" click on the radio button marked "Pages from..", then enter the first and last page numbers worked out in step 1 into the "from" and "to" boxes.
- 5. In the "Page Handling" area, next to "Page Scaling", select "Fit to paper". The press "OK"

Note that the document is set up for double-sided printing – if you print it out single-sided then you will find a number of blank pages present, which may be removed and reused.

# Printing the document on an US Letter format printer

Since A4 and US Letter sizes are similar, it is expected that this document should print satisfactorily on the latter format paper. This has not been tested however, and is not guaranteed. Follow the steps as for A4 printing, and make doubly sure that "Fit to paper" is selected (step 5).

## Any other problems?

Please get in touch with me at <a href="mailto:archivist@vmarsmanuals.co.uk">archivist@vmarsmanuals.co.uk</a>.

Richard Hankins, VMARS Archivist, Summer 2004

# F 514

# WIRELESS SET NO. 62

# SECOND TO FOURTH ECHELON WORK

Note: This issue supersedes Issue I which has been revised throughout.

# CONTENTS

	Paras.
MECHANICAL REPLACEMENTS AND ADJUSTMENTS	
Frequency range switch SlA	1
Services switch S4A	
R.F. coils	3
Resistor R6D	2 3 4
4-Gang condenser C9A-D and flick mechanism	·
Preliminary	5 <del>-</del> 8
Flick springs	9
TEST AND ALIGNMENT PROCEDURE	
Test equipment required	10
Trimming tool	11
${\tt Table}$	12
WINDING DETAILS	
LL	11.3
L2	14
L3	15 16
<u> </u>	116
<u>15</u>	17
L6	18
L8	19
L9	20
L10	21 22
	2 <b>3</b> 24
Relay coil	
T1. T2	25 <b>2</b> 6
т2	27
T4 microphone transformer	28 28
T5 output transformer	29
. To rotary transformer	30 <b>- 33</b>
T7	34
11	<b>J</b> -T
TABLE	
	Page
Table 1 - Alignment and test procedure	7-21

F 5<del>14</del> 644`

#### FIGURES

	Page
Fig.l - Flick mechanism	14
2 - Flick spring tool	4
3 - Trimming tool	5
l <sub>+</sub> - Aerial coupling setting	6
5 - Attenuator	21
6 - Modulation choke, LllA	23
7 - Microphone transformer T44.	25
8 - Output transformer T5/A	25
9 - Field coil NP	26
10 - Field coil SP	26
ll - Field coil assembly	27

# MECHANICAL REPLACEMENTS AND ADJUSTMENTS

# Frequency range switch SLA

1. To dismantle the switch SIA, remove the knob by removing the centre screw and loosening the grubscrew. Take off the knob and prise off the metal cap and Neoprene seal, and then detach the escutcheon by removing the fixing screws. Turn the set upside down and unscrew the two screws holding the click plate to its mounting frame. By rotating the click plate and pulling the shaft forward, the shaft and click plate can be detached. This will allow the wafers to be removed separately as required.

#### Services switch S4A

2. To dismantle the services switch, remove the knob and scaling as in para.l, and unscrew the two screws holding the switch to the front panel. To remove the switch it will be necessary to unsolder the shorter leads to it before it can be withdrawn.

# R.F. coils

3. To remove an R.F. coil, unsolder the connections to the coil and remove the nut and shakeproof washer, on the top of the chassis, which holds the coil in place. The coil, complete with dust core and trimmer, can now be removed.

# Resistor R6D

4. The grid leak, R6D, of the sender buffer amplifier, V5A, is mounted in a screened box which partly covers the valveholder of this valve. To reach this resistor, or the pins screened by the box, remove the lid of the screened box by unsoldering it at the three soldering tags.

4-Gang condenser C9A-D and flick mechanism (Fig.1)

# Proliminary

- 5. (a) Remove the dial assembly, slow-motion and flick knobs and clamping nuts.
  - (b) Remove the three screws holding the main gang to the side plate of the flick mechanism.
  - (c) Slacken all holding screws on the front panel and remove the crystal holder completely. This allows the front panel to be eased away from the chassis.
- 6. To remove the condenser:-'
  - (a) Unsolder the leads connecting C4A and C4B to the gang.
  - (b) Unsolder the earth connection to the junction of R6A and R7B on the TC1 tag panel on the top of the gang.
  - (c) Unsolder the two earth leads at the gang frame.
  - (d) Unsolder the lead connecting ClA to LlA.
  - (e) Unsolder the leads connecting SlA/1, SlA/4, SlA/5 and SlA/6.
  - (f) Ease the 4-gang condenser out sideways.
- 7. To remove the flick mechanism:-
  - (a) Remove the three nuts and bolts holding the flick assembly to the chassis.
  - (b) Undo the nut holding R26A to the flick mechanism frame and leave the resistor suspended in the wiring.
  - (c) Ease the front panel forward from the chassis so that it clears the flick indicators.
  - (d) Then carefully ease the flick assembly straight up from the chassis so as to glear the trimmers.
- 8. To replace the gang and flick mechanism, reverse the procedure.

# Flick springs

9. To replace the flick indicator springs with the flick mechanism in position on the chassis, use the tool shown in Fig.2. Thread the spring through the eye provided and then by careful manipulation the spring can be removed and replaced as required.

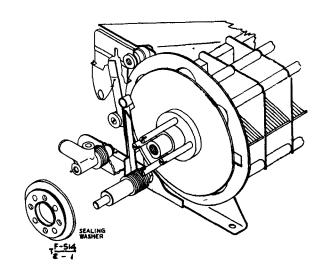


Fig.1 - Flick mechanism


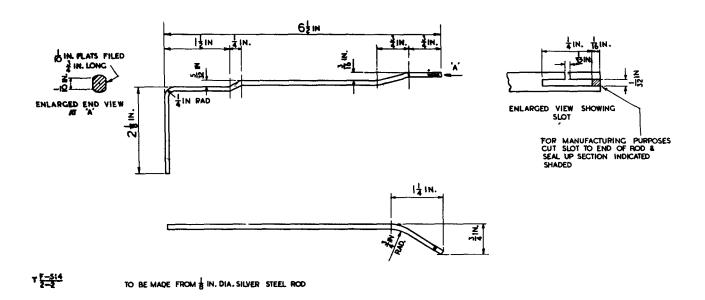


Fig.2 - Flick spring tool

 

# TEST AND ALIGNMENT PROCEDURE

# Test equipment required

# Trimming tool

11. Fig. 3 shows details of a suitable trimming tool which should be made out of 1/4 in. Tuffnol rod or similar material.

# Table 1

12. This gives the alignment and test procedure in two columns, the left-hand column detailing the method of alignment, while the right-hand column gives relevant extracts from the R.E.M.E. Specification (Tels. A 820), giving performance to be achieved.

 


Fig. 3 - Trimming tool

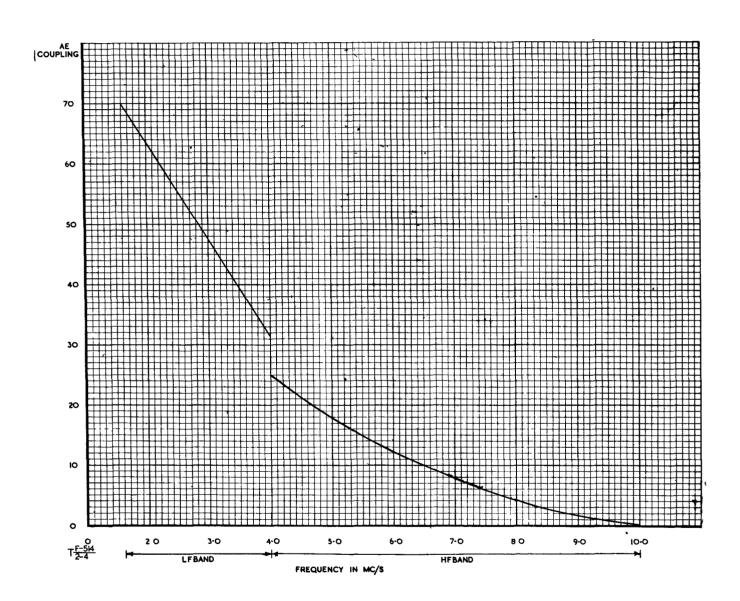


Fig.4 - Aerial coupling settings

Table 1 - Alignment and test procedure.

RECEIVER	except when set checking beat os Output meter of disconnected whe	N switch to REC ON switched to NET or when scillator 150Ω impedance: headset en measurements are made 2V, measured at set input
Item	Method of alignment or testing	Test R.E.M.E. Spec.
A.F. amplifie	r Connect a B.F.O. between junction of C5C and S4A/8 and chassis. Switch to R.T. GAIN control to max.	1. Output Audio out- put not less than 200mW at lkc/s
Beat oscillat	Set a signal generator to 460 kc/s exactly by beating it with a crystal calibrator. Connect the signal generator, unmodulated, to the grid of VIB through 0.1µF with 0.5MΩ to earth. Switch to NET and ALL ON. Allow the set to warm up and adjust LlOA for zero beat.	2. Het tone range. At  NET, and with an  unmodulated input  at the aerial  socket of 20µV at  any frequency with—  in the coverage  of the set, the  tuning control  will be adjusted  for zero beat.  Switch to G.V.  With the HET TONE  control at either  end of its travel,  the beat note should  lie between 2 and 5  kc/s
		increased to 10mV and the GAIN control set appropriately, it should be possible to tune through zero beat with no evidence of pulling Smoothness of variation of the beat frequency by the HET TONE con-

# I.F.amplifier

The signal generator is used, set at exactly 460kc/s, mod-ulated at 400c/s to 30% fading through 0.1μF to the valve top cap, with 0.5ΜΩ to chassis and grid lead disconnected.

With input to VIE, adjust diode (top) and anode (bottom) coils of T3Λ for maximum output.

With input to VID, adjust grid (top) and anode (bottom) coils of T2A for maximum output

With input to VIB and damping circuit of OμF and 20kΩ in series connected between grid VID and chassis, adjust grid and anode coils of TIA for maximum output. Remove damping circuit

trol should be satisfactory With the frequency dial of the set at 1.6Mc/s and with a 100µV modulated signal at approximately 460 kc/s applied to VlB top cap through 0.1 µF. with  $0.5M\Omega$  connected between top cap and chassis, and normal grid lead disconnected, tune the signal generator for maximum output

- 4. Sensitivity. The input required at this peak frequency for an output of 50mW must not exceed 120µV
- 5. Adjacent channel selectivity. With signal generator output at 100 mV, set VOLUME control for output of 10mW. Increase signal generator output to 200µV and note frequencies on either side of resonance for 10mW output. The difference between these two frequencies will be the bandwidth at 6db. down. The mean of these two frequencies should lie between 458 and 462kc/s and within lkc/s of the peak

Repeat with an input of 100mV to find the band-width at 60db. down.

		The band-width at 6db. down should be between 5 and 8kc/s and the average slope between 6 and 60db. should not be less than 4.7db./kc/s The specification also quotes maximum band- widths as follows:- 20db. 13.5kc/s max. 40db. 19.0kc/s max. 60db. 28.0kc/s max.
Local oscillator	Replace baseplate Switch to 4-10mc/s RANGE and to NET. Set tuning to 9Mc/s and inject an accurate 9Mc/s signal (from crystal calibrator) to grid of VIB. Adjust C12B for zero beat. Tune to 4Mc/s and adjust L6A for zero beat. Check the error at Mc/s points on the dial and repeat till satis- factory. Seal core and trim- mer and recheck. Switch to 1.6-4Mc/s RANGE. Tune to 4Mc/s and adjust C12A for zero beat. Tune to 2Mc/s and adjust L5A for zero beat. Check at 3 and 4Mc/s and repeat until satisfactory. Seal core and trimmer and recheck  If it is impossible to align the set, slacken the dial stops, at the top and bottom of the front plate of the main tuning con- denser, and turn condenser to maximum capacity. Adjust the cursors to take up the average errors on L.F. and H.F. bands. Fix the dial stops so that the condenser is prevented from fully opening or closing, but covers the frequency band	calibration. The calibration error of the tuning dial at any salient point must not exceed 2% between 1.6 and 8Mc/s, or 1% between 8 and 10Mc/s  7. Coverage. The frequency coverage should be from 1.6 to 10Mc/s with an overlap of not less than 2% between the two bands

644

# Table 1 (contd.)

RF caplifier '

(Acrial coupling condenser set to reading in Fig.4 and acrial tuning inductance adjusted for maximum sensitivity)

Switch to 4-10Mc/s R/NGE and to NET. Inject a signal at 9Mc/s to the aerial and tune for zero beat

Modulate signal 30% at 400 c/s and adjust ClOnfor maximum output.
Inject a 4Mc/s signal, tune receiver to it and adjust L2% for maximum output. Repeat until satisfactory. Seal core and trimmer

Switch to 1.6-4Mc/s
RANGE. Inject 4Mc/s
signal. Tune receiver
to it and adjust CllA
for maximum output.
Inject a signal of 2Mc/s,
tune receiver to it and
adjust L3A for maximum
output. Repeat until
satisfactory. Scal core
and trimmer

- 8. R.F. Sensitivity. With an input of 5µV at 1.7, 2.5 and 4.0Mc/s on the L.F. band, it should be possible to obtain an output of at least 50mV. With an input of 8µV at 4, 6 and 9Mc/s on the H.F. band, it should be possible to obtain an output of at least 50mW.
- 9. Signal-to-noise ratio. With an input of 3µV, the signal-to-noise ratio should be greater than 20db. at any frequency within the coverage of the set. For this test the G.IN control should be adjusted to give an audio output of 10mW; the modulation is then switched off and the noise output measured
- 10. Second\_channel selectivity. With an input of 10µV from the signal generator, the receiver should be tuned to resonance and the GaIN control adjusted to give an output of 10mW. The signal generator will then be adjusted to the second channel frequency and, with the receiver controls unaltered, the signal generator tuned for maximum receiver audio output of 10mW. various inputs from the signal generator should be noted and the second channel ratios obtained.

i	Table 1	(GOLLEG*)		
				tios should not than the figures
		Signal frequency Mc/s.	Second chan- nel fre- quency.Mc/s	Second channel ratio.db.
		1.6 2.5 4.0	2•52 3•42 4•92	67 57 47
		4.0 6.0 9.0	4•92 6•92 9•92	52 42 25
		11. <u>I.F.</u>	the sensiti intermediat should be a	At any fre- in the coverage vity to the ce frequency at least 80 db, sensitivity to
Over-all		12. Over	externally lkc/s to 30 receiver ar GAIN control output of I modulation then be varithe modulation stant, and noted at the below.	mal at 1.6Mc/s, modulated at %. Tune the ad set the ol to give an

Table 1 (contd.

TEDLE I (CONTU.					
	Ī	Modulation	_ 0u	tout	
		frequency	mVI	<u>db.</u>	r
		400c/s	6.3 to 15.8	<u>+</u> 2	ŧ I
		750c/s	8.0 to 12.5	<u>+</u> 1	i s
		lkc/s	10.0	0	Page 1 may 10 mg 1
		2kc/s	1.6 to 2.5	-6 to-8	
		3kc/s	0.2 to 0.5	-13 to -17	The second secon
	13	t: p	he <b>r</b> eadir ut meter	o signal ing of an oudue to L.F. exceed 10	t→ • hum
Crystal operation	1./	s a c i s s s s p p d o o o f s c c o s m o p s	witch to nd insert rystal (s n holder. witch to witch to ressel sv hone. ial near btain max n meter, rom L.F. witch to hock sens utput of hould be odulated ver the I ut of at hould be	ch XTAL/MO XTAL, tune appropriation and the signal + I.  Set met DRIVE, sys C.V. and do witch on mirune FREQUE frequency cimum defle approachine approachine approachine are ceive an sitivity at least 5 obtained winput of 4 H.F. band, least 50mW obtained winput of 7	set te F.) er tem epress cro- NCY to ction g band. d , an Onwi ith a -
C.W.operation	1-1	I n 3 a T a	nject as al at 4Mc 0% at 400 erial the une set and, with	n to R.T. a small sig- c/s, modula Dc/s, to th rough 60µµF on the L.F. GAIN contr	ted le band,

for 20mW output from receiver. Switch off modulation, switch to C.W. and adjust HET. TONE for maximum beat note output at a frequency not greater than lkc/s. The output so obtained should be not less than 60mW With the signal increased to lmV, and GAIN and HET. TONE adjusted for maximum output at a frequency not greater than lkc/s, the output should be not less than 200mW 16. A.V.C. characteristic Switch to R.T. With a modulated input of  $2\mu V$  at 4Mc/s, the receiver should be tuned. Increase input to 100mV with the GAIN control adjusted to give 50mW output. With the signal reduced to 50μV, the output must not fall below 2.0mW

If the output is low, tune the set accurately with an input giving 20mW output, switch off modulation and to C.W. adjust HET.TONE and then adjust the twisted wires joining C29A for maximum output (about 100mW) Reseal

A.V.C.

F 514 644

Meter cali- bration A.V.C.		With no signal applied to the set, the meter reading should lie between 3 and 6½V on the low-voltage scale. When tuned to a signal of 20μV at 4Mc/s, this reading should increase by not less than 3/4V and should show a progressive increase with input signals up to 0.1V with only a single tuning peak. At C.W., with GAIN control fully anti-clockwise, the meter should read not less than 9V
SENDER	General conditions:	The dummy aerial should consist of a 60pF (+ 2%) air-dielectric condenser in series with a 100 (+ 5%) non-inductive resistor capable of dissipating 5%. The resistor should be in the earthy side.  The valve voltmeter should be connected across the 100 resistor.  If an R.F. ammeter is used, the sum of the dummy aerial resistance and the meter resistance should be inserted between the resistor and the set earth terminal.  To tune the set to any frequency, adjust the AERIAL COUPLING condenser to the setting in Fig.4 and tune the AERIAL TUNING inductance for maximum output  (This setting of the AERIAL COUPLING condenser will not be the same as that for maximum signal on receive)
Sender amplifier	Switch to NET and tune set to 9Mc/s. Switch meter to LE and set to R.T. Press pressel switch and adjust drive trimmer C26B as near to maximum capacity, but so that acrial current rises on modulating. Switch meter to DRIVE and adjust ClOB and ClOC for maximum drive. If three peaks are obtained, choose the centre one	18. Drive. The drive voltage should be consistent with meeting the sender output and modulation requirements  19. Drive meter calibration. The reading should be satisfactory from an operator's point of view

	Release pressel switch, switch to NET and tune to 4Mc/s Press pressel switch, switch to R.T. and adjust L2B and L2C for maximum drive. Repeat until satisfactory tracking is obtained. Seal cores and trimmers Switch to 1.6-4Mc/s RANGE and repeat above, adjusting drive trimmer C28A, and then adjusting C11B and C11C at 4Mc/s and L3B and L3C at 2Mc/s Repeat adjustments until sender circuits track and drive is reasonably constant	20. Pulling. With the set  tuned to any frequency within the coverage, the change in emitted frequency as the sender PA circuit is tuned fully through reson- ance should not exceed 100c/s  21. Power output. With the dummy aerial specified, the AERIAL COUPLING condenser set as in Fig.4 and the AERIAL TUNING INDUCTOR tuned for maximum, the follow- ing figures should be obtained
		Frequency R.M.S. Voltage Dummy aerial  Mc/s. across current in  10Ω resistor mA  R.T.(no C.W. R.T.(no C.W. mod.)  1.7 2.3 2.7 230 270 2.5 2.6 3.1 260 310 4.0 2.5 3.0 250 300  4.0 2.4 3.0 240 300 6.0 2.4 3.1 240 310 9.0 1.9 2.5 190 250
Aerial current metering	Adjust by R26A for required results. If they cannot be obtained, the spacing of turns on T7A will have to be adjusted	22. Meter reading. With a  current in the primary of T7A of 350mA at 8Mc/s, the meter should read 10 ± 1V on the low-voltage scale With the same current at 3Mc/s, the meter should read 12 ± 1V

Table 1 (contd,)

Charge to 7	
Crystal operation  23. Power Output. For of put frequencies 6Mc/s, the output with crystal conshould be not less than 75 the output with control  24. Tuning. When using control, correct adjustment of the put of the put of the control of the contr	below  tt trol ess than t with for een 6 ould be % of MO g crystal ne
Modulation and sidetone  In Fig.5 will be connected across output of a B.F. monitored by a voltage across fed to the microterminals of the plug. The modulation should be examinated to produce a transpattern	a the s shown e the o o o o o o o o o o o o o o o o o o o
Fig.5 - Attenuator	
25. Stability. With the frequency at lke pattern should trace of instable the modulation of varied from 0 to the frequency at lke pattern should the modulation of varied from 0 to the frequency at lke pattern should some flattening output modulation of the frequency at lke pattern should at late at high modulation of the frequency at lke pattern should the frequency at lke pattern should the modulation of the frequency at lke pattern should the modulation of the frequency at lke pattern should the modulation of the frequency at lke pattern should the modulation of the modulation of the frequency at lke pattern should the modulation of the frequency at lke pattern should the modulation of the frequency at lke pattern should the modulation of the frequency at lke pattern should the modulation of the frequency at lke pattern should the modulation of the frequency at lke pattern should the modulation of the frequency at lke pattern should the modulation of the frequency at lke pattern should the modulation of the frequency at lke pattern should the modulation of the frequency at lke pattern should the modulation of the frequency at lke pattern should the frequency at	show no ility as depth is o 100%.  mally of the on peaks ation dulation o occur f the
Page 16 triangle is for Issue 2, 30 N	

- 26. Modulation voltage. The
  B.F.O. output at lkc/s,
  to give 100% modulation,
  should lie between 25 and
  50V
- 27. Sidetone. The sidetone should lie between 3 and 20mW with the sender modulated 100%
- 28. Audio response. The B.F.O. input voltages required for 50% modulation should be within the following limits

Modulation frequency c/s.	Input limits for 50% Modulation db.
400	0 to +6
750	0 to +2
1,000	0
2,000	0 to -3
3,000	0 to -3

- 29. Modulation distortion. The set will be modulated by speech, using a Microphone and receiver headgear assembly No.10. A trapezium trace of approved shape should be obtained with no deterioration of the trapezium into a cotton-reel shape
- 30. Hum modulation. When fully tuned with the dummy aerial, the hum modulation on the carrier should not exceed 5%

Keying	31. <u>Keying</u> . A listening test should determine that
	keying chip is negligible.
,	The keying relay,
	must be capable of
	operating at 30 w.p.m.
	A mechanical sender
	should replace the key
! !	and the output of the
	sender should be viewed on a C.R.O. The
	on a C.R.O. The mechanical sender will be
•	arranged to send groups
	of five dots, the dot
	length being approx-
j	imately 50mS. Under
	these conditions, five
	dots should be observed
	on the screen of the C.R.O., the shape of the
	keyed wave-form should
	be sensibly square and
	free from spurious
İ	spaces due to bouncing
	of the relay contacts,
	the spaces being
	approximately equal in length to the marks
•	Tengui to the marks
	32. Spacing wave. No
	spacing wave should be
	observed on the
	fundamental output
	frequency by any method
	of test, including using a remote receiver for
	C.W. reception
	33. Break-in working. When
	keying the sender at any
	speed up to 30 w.p.m.
	with the receiver at any sensitivity, there
	should be no aurally
	noticeable receiver
	recovery time, and
	during keying there
	should be no spurious
	oscillations such as to
	cause a howl in the
	headphones

Note: These Pages 19 and 20, Issue 3, supersede Pages 19 and 20, Issue 2, dated 30 Mar 47. Additional information has been added to Test Spec No 38.

Table 1 - (cont)

Netting	34.	frequency within the range 1.6 to 10Mc/s inclusive, a test signal should be injected from the signal generator, using the dummy antenna. The netting error, defined as the difference in frequency between the applied test signal and the emitted frequency of the sender immediately after the conclusion of the netting procedure, should not exceed 1kc/s at any input signal level between 3µV and 10mV, and at any 1.t. voltage between 10.8 and 13.2V.  Netting tone. Under these
GENERAL.		conditions, it should always be possible to adjust the beat note continuously through zero beat, ie no receiver saturation may occur The beat note should always be of reasonable intensity, and there should be no spurious responses
Flick controls	36.	Flick resetting accuracy.  Engage one of the flicks.  With the flick lever at  SET, unlock the setscrews and tune to zero beat a steady 8Mc/s c.w. signal.  Tighten the setscrews and set the lever to FLICK.  Turn the dial in alternate clockwise and anti-clockwise directions and retune to the set value ten times in all, each time on coming

ELECTRICAL AND MECHANICAL ENGINEERING REGULATIONS

Table 1-(cont)

		to the set value, setting the flick lever to SET and measuring the beat note frequency. The frequency should not exceed 3kc/s. Repeat with the other flick
Calibration of set meter: L.T.	Adjust input to set to exactly 12V. Read set meter to nearest 1/4V and mark in appropriate place on front panel	
Calibration of set meter: H.T.R and H.T.S		37. The h.t. voltage recorded should be accurate to with-in ±20%
Power consumption		38. Current consumption. The current consumptions should not exceed the following values:-  (a) Sets fitted with rotary transformer p.s.u.
		REC ON, GAIN at max, no signal input 3.0A ALL ON, GAIN at max, no signal input 3.7A SEND, tuned with dummy antenna, R.T., no modulation 4.6A SEND, tuned with dummy antenna C.W., no modulation 5.0A
		(b) Sets fitted with Power supply, transisterized,
		REC ON, GAIN at max, no signal input 0.9A ALL ON, GAIN at max, no signal input 1.5A SEND, tuned with dummy antenna, R.T., no modulation 2.5A SEND, tuned with dummy antenna, C.W., 2.7A These figures are typical and may vary with individual equipments

Note: These Pages 21 and 22, Issue 3, supersede Pages 21 and 22, Issue 2, dated 30 Mar 47. Information on the P.S.T. No 36 has been added to Table 1.

Table 1 - (cont)

H.V. and L.V. operation		39•	The operation of the set should be satisfactory and it should be possible to obtain satisfactory operation of all controls with any supply voltage between 10.8 and 14V, measured at the set input socket
Suppression			Noise e.m.f. in battery leads  For this test the l.t.  batteries should be connected to the set by Connector, twin, No 274.  Using the dummy antenna tune the receiver to any frequency within the coverage of the set. Switch to C.W. and with no signal input, note the residual noise on an output meter. Disconnect the chassis side of the dummy antenna and join it directly to the negative terminal of the battery. Again note the maximum residual noise on the output meter, retuning the a.t.i. if necessary.  The two readings should not differ by more than 1dB
Power supply, transis	torized, No 36	TANK TANK TANK	•
Insulation resistance		SP was not to the state of the	The insulation resistance between the output terminations and chassis shall not be less than 10MQ when measured with a 500V megger
Supply protection	Apply 12V ±2°/o d.c. to the input terminals i the <u>reverse direction</u>	n 	The current taken from the supply shall not be greater than 1mA d.c.
Voltage regula- tion and efficiency	Apply 12V ±2°/o d.c. to the input connections		The open circuit output voltage shall not exceed 600V

TELECOMMUNICATIONS F 644

ELECTRICAL AND MECHANICAL ENGINEERING REGULATIONS

Table 1 - (cont)

	Apply 12V ±2°/o d.c. to input connections	With a load of 30mA ±4°/o the output voltage shall be 350V ±5°/o
	Apply 11.5V ±2°/o d.c. to the input connections	With a load of 60mA ±4°/o the output voltage shall be 300V ±5°/o. The overall efficiency under these conditions shall not be less than 67°/o.
Ripple voltage	Apply 11.5V ±2°/o d.c. to the input connections and connect a multimeter type 9SX in series with a 4µF paper capacitor to the output connections	With a load of 60mA ±4°/o the ripple voltage measured shall not exceed 12V

# WINDING DETAILS

Note: All coils should be adjusted for optimum operation of the set. The standards referred to in the following paragraphs should be obtained by using spare coils removed from the sets.

L1

13. Winding to consist of 230 turns, of S.S.C. enamelled copper wire, wave-wound in one section, 3/16 in. wide. Coat with coil dope and check inductance, which should be  $470\mu H \pm 5\%$ . Resistance should be  $17.3\Omega \pm 10\%$ .

L2

14. Winding to consist of 14.1/2 turns of 30/48 D.S.C. S.W.G. enamelled copper wire, solenoid-wound over 0.25 in., end of winding 0.75 in. from fixing end of former, ie end nearer chassis when assembled. Anchor start and finish with small pieces of shellac. Coat whole coil with coil dope. Check inductance without brass insert or core and adjust to standard (2.89μH ±2%). Resistance should be 0.3Ω approximately. Bake for 1 hour in a well-ventilated oven at 100°C. Remove from oven and immediately immerse in container holding Hymeg varnish No 2. Place container in vacuum chamber and reduce pressure to less than 1 cm. Maintain pressure until all bubbles leave the left coil. Remove and drain for 30 minutes. Insert fixing bushes complete with crosswire and bake for 3 hours at 132°C. When cool, fit core and trimmer. Check coil and adjust core to standard (3.5μH ±1%).

L3

15. Winding to consist of 47.1/2 turns of 30/48 S.W.G. D.S.C. Litz enamelled copper wire, solenoid-wound over 0.81 in., end of winding 3/8 in. from fixing end. Anchor and coat as for L2. Check inductance as for L2 and adjust to  $14\mu H \pm 2\%$ . Resistance,  $0.95\Omega$  approximately. Finish coil as for L2 and adjust core to standard  $(17.7\mu H \pm 1\%)$ .

# RESTRICTED

ELECTRICAL AND MECHANICAL ENGINEERING REGULATIONS

TELECOMMUNICATIONS
F 644

Note: This Page 22A, Issue 3, is to be filed immediately after Page 22, Issue 3, dated 15 Dec 65. It contains information previously on Page 22, Issue 2, dated 30 Mar 47.

**L**4

16. Coil to consist of 150 turns of 36 S.W.G. S.S.C. enamelled copper wire, wavewound in one section, 3/16 in. wide. Check inductance to standard (210 $\mu$ H ±5%). Resistance, 3.0 $\Omega$  approximately. Finish coil as for L2 and recheck to standard.

**L**5

17. Winding to consist of 47.2/3 turns of 30/48 S.W.G. D.S.C. Litz copper wire, solenoid-wound over 0.75 in.; a tap to be made at 14.1/4 turns; end of winding 5/8 in. from fixing end. Anchor and coat as for L2. Check inductance as for L2 and adjust to standard ( $11.75\mu H \pm 2\%$ ). Resistance should be  $0.780 \pm 10\%$ . Finish coil as for L2 and adjust core to standard ( $14.25\mu H \pm 1\%$ ). Tap should be made as follows: Wind to tap, double wire for 3 in. and thread through hole in former. Pull through former, solder to tag and continue winding.

**L**6

18. Winding to consist of 16.1/3 turns of 26 S.W.G. enamelled copper wire, solenoid-wound over 7/16 in; a tap is made at 5.2/3 turns. Top of coil to be 11/16 in. from fixing end. Tap made as in L5. Second winding is 3.1/4 in. turns of 42 S.W.G. S.S.C. enamelled copper wire, wound over two layers of 0.003 in. interleaving tissue. The first turn of this winding to be directly over the second turn of the first winding. Anchor and coat as for L2. Check inductance as for L2 and adjust to standard (2.58 $\mu$ H ±2%). Resistance of first winding should be 0.1 $\Omega$  approximately, for second winding, 0.3 $\Omega$  approximately. Finish coil as for L2 and adjust to standard (3.09 $\mu$ H ±1/2%).

**L**8

19. Coil to consist of 20 S.W.G., wound in three layers of 19 + 18 + 17 turns; ends to be pulled through holes in former. Check inductance to standard (12 $\mu$ H  $\pm$ 10%). Resistance should be 0.07 $\Omega$  approximately. Finish as for L2 and test to standard.

EME8c/2795

644.

L9

20. Coil to consist of 20 turns of 36  $S_2$ W.G. S.S.C. enamelled copper wire, solenoid close-wound. Fix and coat as for L2. Check inductance to standard (3.0µH,  $\pm$  2½). Resistance should be 0.32 $\Omega$  approximately. Finish as for L2 and test to standard.

#### LLO

- 21. (a) Coil A. 4 turns of 30 S.W.G. S.S.C. enamelled copper wire, wound over a Length of 5/16 in. Top of coil 1 1/8 in. from bottom of former. Wind two layers of 0.003 in. interleaving tissue.
  - (b) Coils B and C.
    Coil B: 130 turns of 6/45 S.W.G. D.S.C. Litz copper wire, wave-wound,
    5/16 in. wide.
    Coil C: 50 turns of 42 S.W.G. S.S.C. enamelled copper wire, wave-wound
    with the first 50 turns of coil B, using the same feed. Thinly coat
    with coil dope.

Check inductance of coil B which should be  $90\mu H$ ,  $\pm 2\%$ . Assemble plates and supporting wires, solder connections to correct wires, helixing to prevent breakage. Check resistance of coils B and C (both 3.2 $\Omega$  approximately). Bake in well-ventilated oven for 1 hour at  $100^{\circ}$ C. Remove from oven and immerse in container containing Hymeg varnish No.2. Place container in vacuum chamber and reduce pressure to less than 1 cm., until all bubbles have left coil. Drain for 30 minutes and bake for three hours at  $132^{\circ}$ C. When cool, insert core and bush, smearing the serrated edge of the bush with a thin layer of varnish. Connect condensers, etc., and check in the set that it is possible to align beat oscillator to 460 ke/s.

### Lll

22. Consists of 4,500 turns of 47 S.W.G.enamelled copper wire on bobbin. The start and finish to be terminated with 19/45 D.S.C. copper lead-out wires, the 47 S.W.G. wire being doubled back twice to provide adequate strength. Insulate with oiled silk and check D.O. resistance, which should be 1.350Ω approximately. Assemble laminations (interleaved) and fit tag plate assembly. Bake in oven for 1 hour at 100°C. and impregnate with bitumen. Check that inductance at 2V A.C., 1 kc/s, is not less than 15H. Check D.C. resistance and flash-test 500V A.C. between winding and core.

# Ll2

23. Winding to consist of two wave-wound sections, each of 300 turns of 40 S.W.G. S.S.C. copper wire, 1/4 in. dia., spaced 1/16 in. Coat with dope, and check inductance which should be 1.55mH,  $\pm$  5%.Resistance, 27 $\Omega$  approximately. Impregnate as for L2 and repeat tests.

 


Fig.6 - Lll

# Relay coil

24. Coil to consist of 4,500 turns of 36 S.W.G. enamelled copper wire. Resistance should be  $100\Omega$  approximately. Flash-test at 500V A.C. between tags and frame.

Tl

- 25. (a) Primary winding to consist of 130 + 130 turns of 6/45 S.W.G. D.S.C. Litz copper wire, wave-wound in two sections 5/16 in. wide and with a space of 1/16 in. between sections. Start of winding to be 0.8 in. from bottom of former. Edge of winding to be 0.76 in. from end of former.
  - (b) Secondary to consist of 119 + 119 turns of 6/45 S.W.G. D.S.C. Litz copper wire in two sections, each 5/16 in. wide and with a space of 1/16 in. between sections. Edge of windings to be 0.22 in. from finish of primary.
  - (c) Assemble as for IdO, and check primary inductance which should be 171µH, ± 1%. Secondary inductance should be 153µH, ± 1%. Impregnate as for IdO, and check resonant frequency with condensers in place. Should tune to 460 kc/s with cores not closer than 4 turns to maximum or minimum.

T2

- 26. Wound as for Il with following alterations:-,
  - (a) Primary. 116 + 116 turns. Start to be 0.71 in. and edge 0.66 in. from edge of former. Inductance, 1444H.
  - (b) Secondary. 118 + 118 turns. Edge 0.43 in. from primary. Inductance, 150µH.

**T**3


- 27. Wound as for Tl with the following alterations:
  - (a) Primary, 93 + 93 turns. Start to be 0.68 in. and edge 0.63 in. from end of former. Inductance, 87µH.
  - (b) Secondary, 93 + 93 turns. Edge 0.48 in. from primary. Inductance, 87µH.

# T4, microphone transformer

- 28. (a) Secondary, 14,000 turns of 47 S.W.G. enamelled copper wire, one layer of oiled silk wound half-lap.
  - (b) Screen, One layer of 47 S.W.G. enamelled copper wire.
  - (c) Primary, 140 turns of 28 S.W.G. enamelled copper wire, one layer of oiled silk wound half→lap.

644.

(d) The ends of the account of screen are to be joined to 19/45 flexible D.S.G. timmed copper wire. Double back twice. All leads to be brought out to 14/36 timmed copper wire insulated with 12 mm. Lik sleeving. All joints to be insulated with interleaving tissue. Check resistance of primary which should be 1.4Ω and that of secondary which should be 4.7kΩ ± 10%. Bake and impregnate as for Ill.

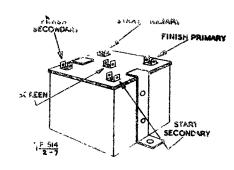

(e) Assemble in can and bend wires to coincide with tagboard. Heat assembly to 1000C, and fill can with bitumen. Allow to cool and assemble tagboard.

Fig. 7 - 14, Microphone transformer


(f) Check resistance and inductance (primary not less than 3mH at 5V, 1 kc/s). Flash-test at 250V.A.C., 50 c/s between windings, and windings and core (screen connected to core).

# T5, output transformer

 
- 29. (a) Secondary, wound on former, 200 turns of 34 SeW.G. enamelled copper wire, layer-wound with 0.001 in. paper interleaving. Cover with two layers of 0.003 in. Clarifoil.
  - (b) Primary, 2,800 turns of 44 S.W.G. enamelled copper wire, layer-wound with 0.001 in. paper interleaving.
  - (c) Cover with 4 layers of 0.003 in. Clarifoil and seal with acetone. Ends of windings to be 14/36 flexible tinned copper wire with sleeving. Check secondary resistance which should be  $5.8\Omega$ , and that of primary which should be  $840\Omega$  approximately. Assemble, check and seal edges with acetone. Bake and impregnate with bitumen as for Ill.
  - (d) Check primary impedance at 10V Λ.C., 50 c/s with 5m/ D.C. flowing, which should be not less than 2.4kΩ. Flash-test 1 kV.Λ.C., 50 c/s between windings and between windings and core.
  - (e) Check insulation resistance at 500V D<sub>•</sub>C<sub>•</sub> between windings and between windings and core; it should not be less than 1,000MΩ•

# T6, rotary transformer

30. Field coil NP. Wound from 32 S.W.G. enamelled H.G. copper wire. Wound on former, 1.046 in. x 0.765 in., with 3/32 radius corners. Winding, 390 turns, 5/16 in. thick, brought out to wire ends 4 in. long; coded start, yellow sleeving finish, black sleeving. Bind with oiled silk tape. Secure lead-out wires with S-bend, as shown in Fig.9, with l2 turns adhesive tape. Form



to an outside radius of 59/64 in. Paint coil with Fig.8 - T5, Output transformer one coat of shellac varnish and allow to dry.

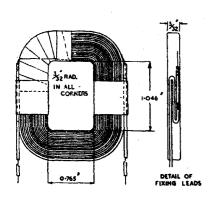

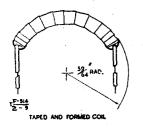


Fig. 9 - T6, Field coil NP

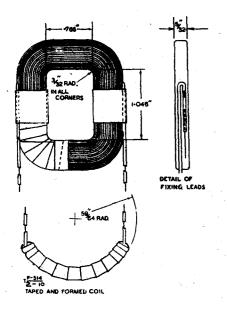


Fig. 10 - T6, Field coil SP.

31. Field coil SP. Wind in reverse direction to that for NP coil but to same specification. Code, start yellow and finish red. After binding with oiled silk secure lead-out wires and U-bend as shown in Fig.10. Form coil to outside radius of 59/64 in. and finish as for field coil NP.

32. On assembly of coils ensure that the polepieces are replaced in their original positions
according to markings. Pole fixing screws are to
be locked by staking, and the leads then given one
coat of enamel. The two yellow leads of the coils
should be soldered together, the joint being
covered with sleeving fixed in place with varnish.

33. It is impossible to rewind the armature. Either the armature or the whole rotary transformer should be replaced complete.

**T7** 

34. Two types of core are used in this transformer:→

(a) Tight stack of 45 laminations

(b) Tape core.

Insulate inside ring with interleaving tissue strip. Place a paper washer on each side of stack, innerand outer edges being folded towards the centre of the stack. Tightly compress assembly, hold in position with one layer of 2 in. white glassbacked tape bound on the outer edge of the ring, the edges being folded inwards; leave the outer end of the tape extended for 1 in. If the core (a) is used, 8 turns of 36 S.W.G. S.S.C. enamelled copper wire should be evenly distributed on ring and the ends secured with ends of tape. If core (b) is used, 6 turns are required. Dip for 3 minutes in bakelite varnish and bake for 2 hours at 120°C.

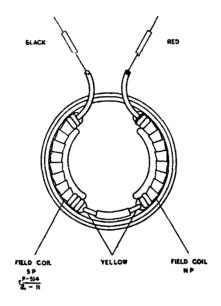


Fig.11 - T6, Field coil assembly

END